
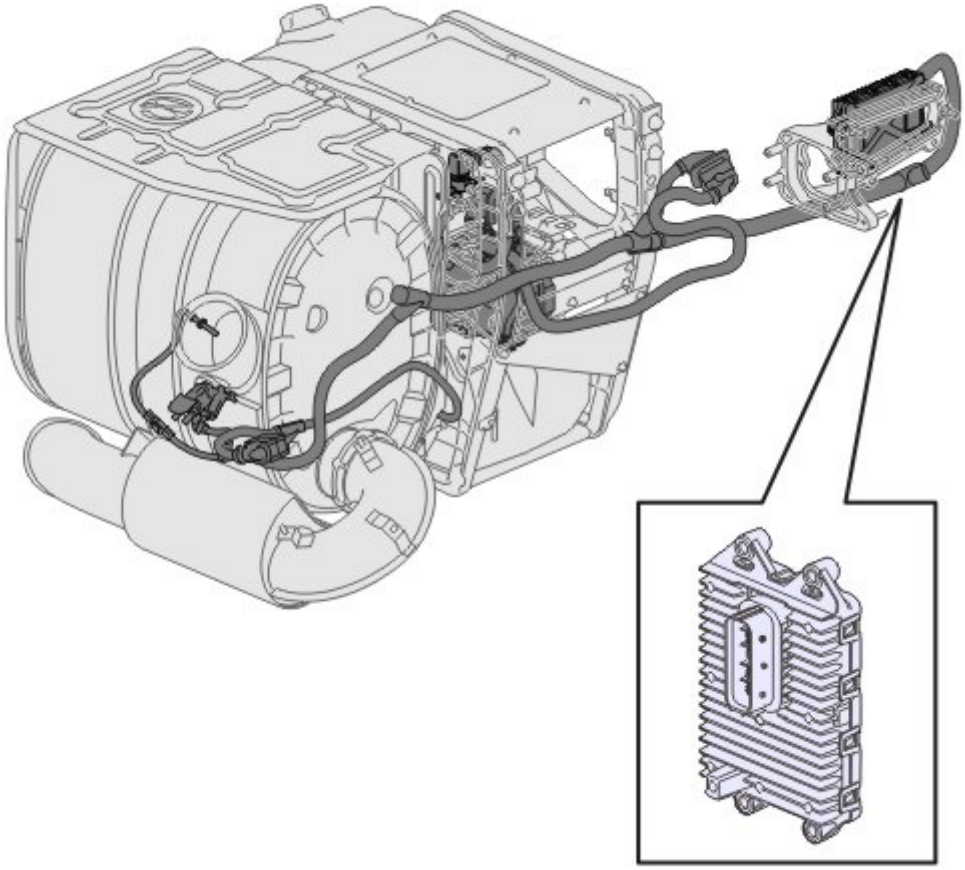



Fault type	Condition for Fault	Observable Symptoms	Possible cause
P06B2 FTB 00	• The voltage at pin A174:50 is more than 5.5 V.	• None.	• Wiring harness. • Connector. • A174: Aftertreatment Control Module (ACM).

Voltage Measurement:



Measuring	Key position	Measurement points		Reference value	Measured value	Other (Special tool No.)
		Breakout box	Wiring diagram			
Supply Voltage check	On	60 – 61	A174.A:60 – A174.A:61	U = 20 V - 30 V		88890074, 9990014, 9998699
Supply voltage check	ON	3 – 61	A174.A:3 – A174.A:61	V = 20 V - 30 V		88890074, 9990014, 9998699

Resistance Measurement:



Measuring	Key position	Measurement points		Reference value	Measured value	Other (Special tool No.)
		Breakout box	Wiring diagram			
Ground connection check	Off	55 – Chassis ground point	A174.A:55 – Chassis ground point1	R = 0 Ω – 5 Ω		88890074, 9990014, 9998699
Ground connection check	Off	58 – Chassis ground point	A174.A:58 – Chassis ground point1	R = 0 Ω – 5 Ω		88890074, 9990014, 9998699
Ground connection check	Off	61 – Chassis ground point	A174.A:61 – Chassis ground point1	R = 0 Ω – 5 Ω		88890074, 9990014, 9998699
Short circuit to ground check	Off	51 – 60	A174.A:51 – A174.A:60	R = Open circuit		88890074, 9990014, 9998699



Measuring	Key position	Measurement points		Reference value	Measured value	Other (Special tool No.)
		Breakout box	Wiring diagram			
Short circuit to battery voltage	Off	60 – All other pins at connector A174, Except A174.A:57 and A174.A:53	A174.A:60 – All other pins at connector A174, Except A174.A:57 and A174.A:53	R = Open circuit		88890074, 9990014, 9998699

- Check that the fuse FA2 is free from faults and its supply wire having voltage (20 V - 30 V).
- Check that the fuse F38 is free from faults and its supply wire having voltage (20 V - 30 V).