



Fault type	Condition for Fault	Observable Symptoms	Possible cause
P203D FTB 00	• Voltage above normal or shorted high.	• None.	• Connector. • Wiring harness. • Short circuit to battery voltage, Signal wire. • Short circuit to 5V, Signal wire. • Level sensor, AdBlue tank.

Resistance measurement:

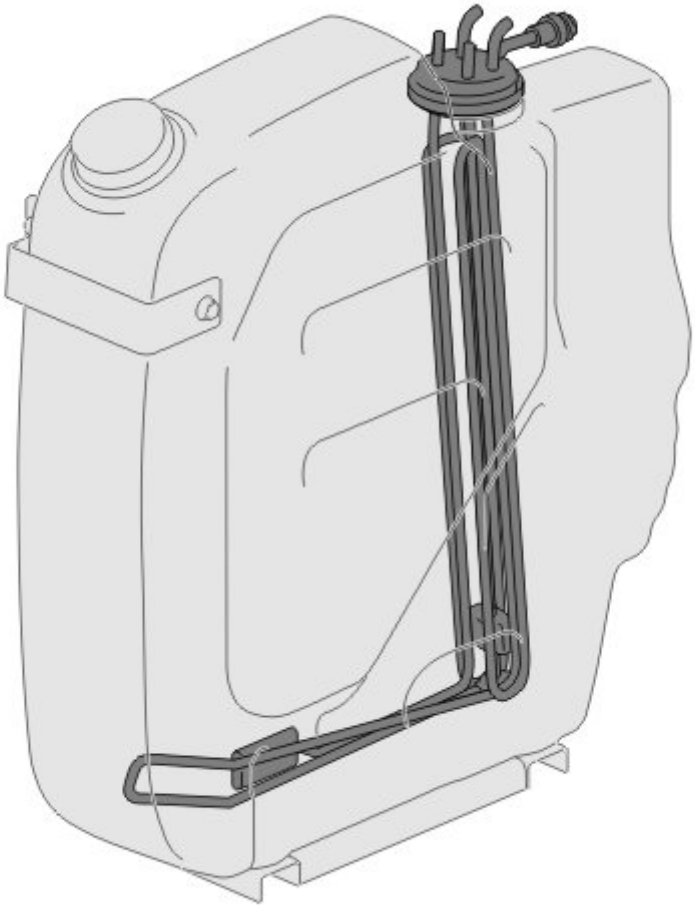

Measuring	Key position	Measurement points		Reference value	Measured value	Other (Special tool No.)
		Breakout box	Wiring diagram			
Short circuit check	Off	50 – 49	B142:2 – B142:1	R = Open circuit		88890074, 88890167, 9998699



Measuring	Key position	Measurement points		Reference value	Measured value	Other (Special tool No.)
		Breakout box	Wiring diagram			
Short circuit check	Off	46 – All other pins at connector A174	A174.A:46 – All other pins at connector A174	R = Open circuit		88890074, 88890167, 9998699, 9990014