


Fault type	Condition for Fault	Observable Symptoms	Possible cause
P208C FTB 00	• The voltage at pin A174.A:20 is below normal value.	• No AdBlue solution dosage.	• Wiring harness. • Short circuit to ground, Control wire (-). • Aftertreatment AdBlue pump. • Aftertreatment Control Module (ACM).

Resistance Measurement:

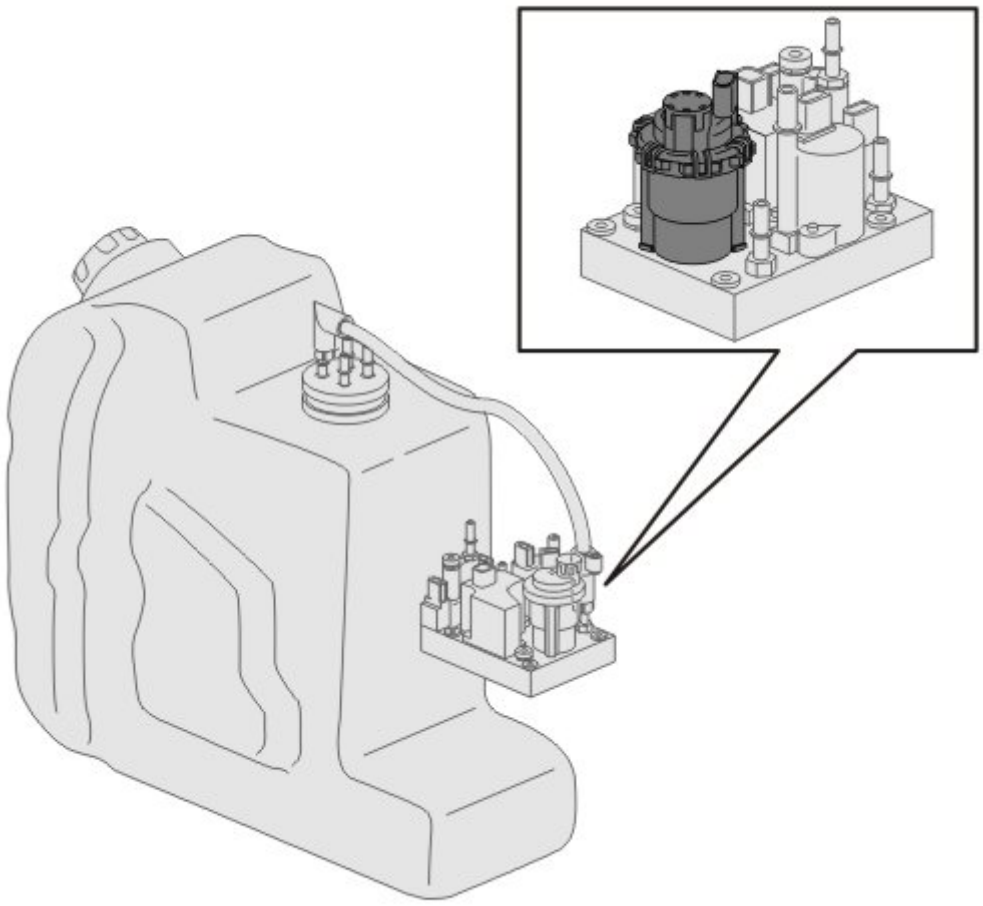

Measuring	Key position	Measurement points		Reference value	Measured value	Other (Special tool No.)
		Breakout box	Wiring diagram			
Short circuit to ground Check	Off	16 – Chassis ground point.	A174.A:16 – Chassis ground point.	R = Open circuit		88890074, 9990014, 9998699

- Disconnect M49 connector and check the DTC status for Active or inactive.
- If shows inactive when disconnected, the fault is in the component instead of the harness.