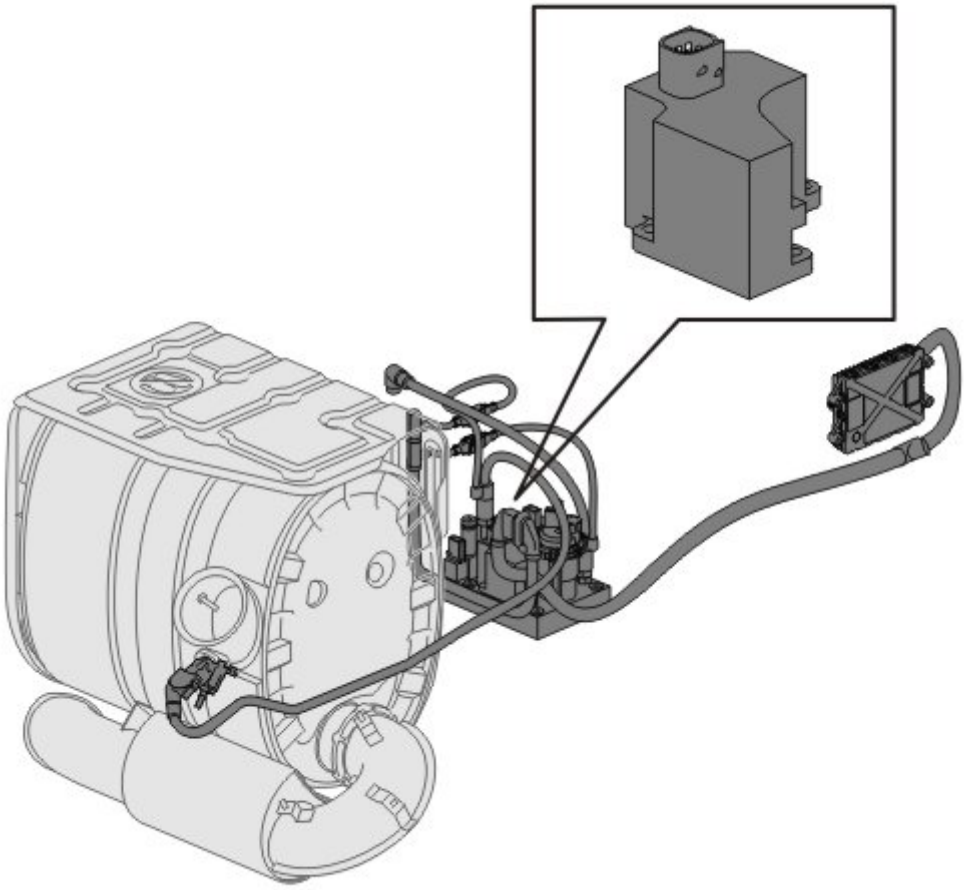


Fault type	Condition for Fault	Observable Symptoms	Possible cause
P20AA FTB 00	• Actuator Stuck Open.	• Constant air purge of Aftertreatment AdBlue line(s).	• Air leakage. • Air valve.

Visual inspection:

- Check that the Air valve is free from faults.
- Check the air lines between AdBlue Pump unit and Nozzle for leakage.
- Verify that aftertreatment AdBlue line connectors are securely connected.
- Check for pinched, restricted or damaged aftertreatment DEF line(s) that could cause poor DEF flow.
- Check the dosing valve for cracks, cuts or chafe.