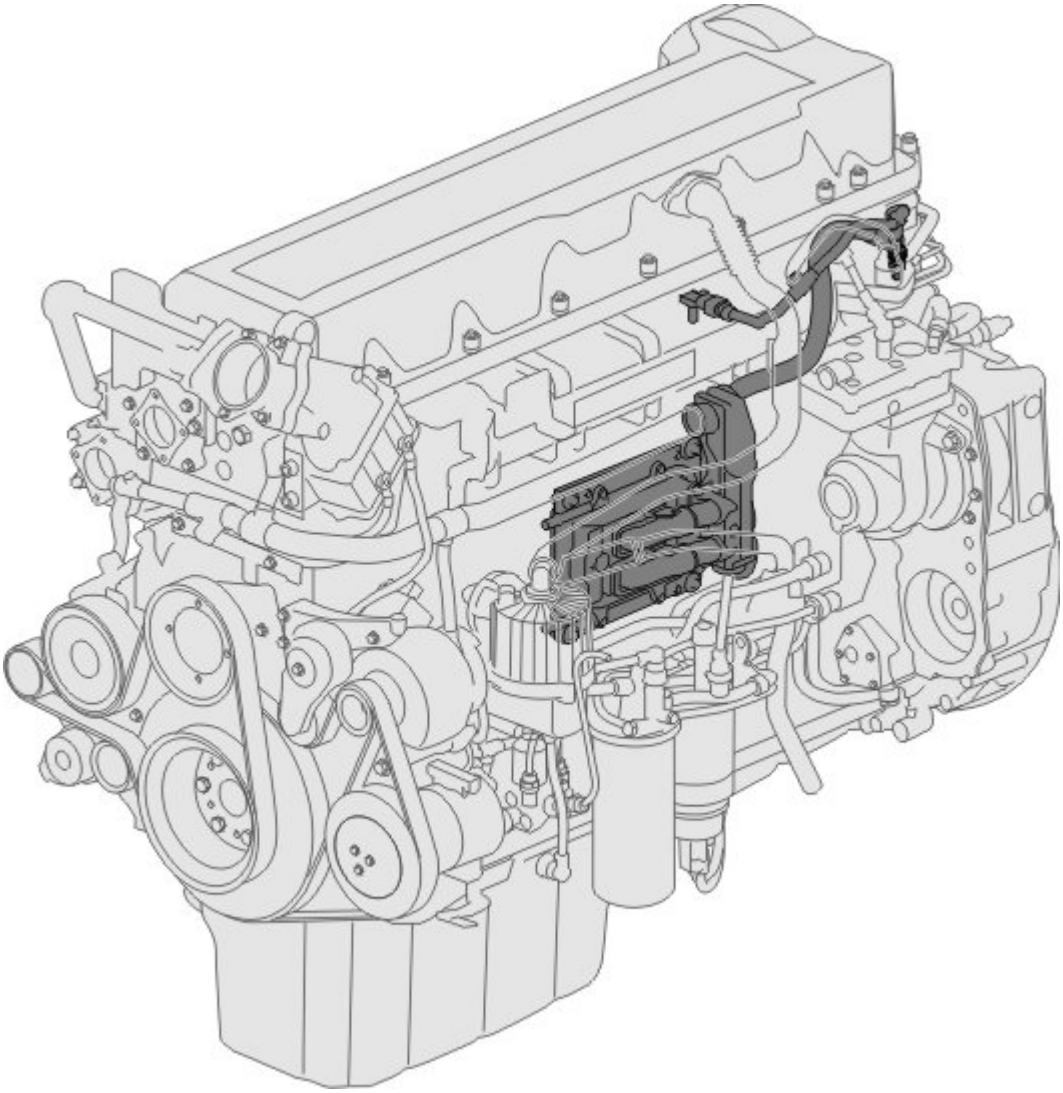


Fault type	Condition for Fault	Observable Symptoms	Possible cause
P009A FTB 00	• The sensor signal is not rational. • Irrational boost temperature compared to coolant temperature and ambient temperature.	None.	• Charge pressure and temperature sensor. • Wiring harness.

Temperature sensor monitoring:

Special Tool: 9998519

- Run the engine until engine coolant temperature has increased by 55ºC (131ºF).
- Cold engine - A deviation of +/-5ºC (9ºF) is acceptable.
- Warm engine, 55ºC (131ºF) - A deviation of +/-15ºC (27ºF) is acceptable.